


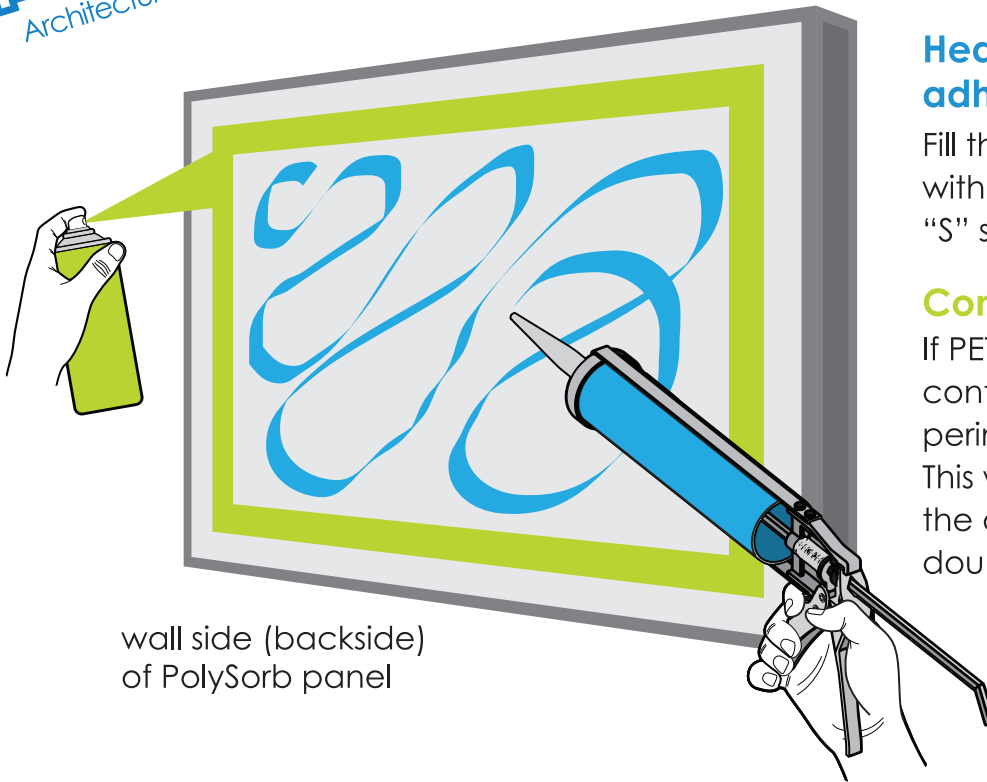

wall side (backside)
of PolySorb panel


Heavy duty construction adhesive (blue line)

Fill the middle of the PolySorb panel with construction adhesive in several "S" shaped patterns.

Contact adhesive (green box)

If PETClips are not used, spray contact adhesive around the perimeter of the PolySorb panel. This will hold the panel securely while the adhesive sets up. Make sure to double coat the entire perimeter.

room wall face

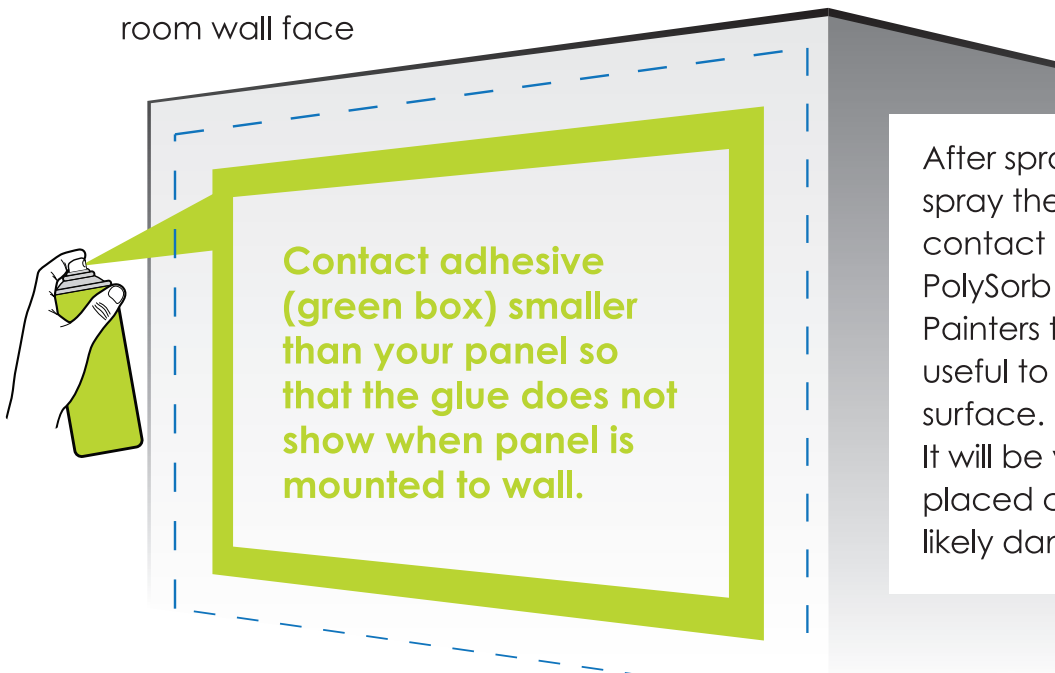

**Contact adhesive
(green box) smaller
than your panel so
that the glue does not
show when panel is
mounted to wall.**

After spraying the PolySorb board, spray the wall or ceiling with the contact adhesive where the PolySorb panel will be placed. Painters tape and masking paper is useful to mask off the surrounding surface. Install the panel CAREFULLY! It will be very difficult to adjust if not placed correctly. Repositioning will likely damage your panel and wall.

*This method is primarily for 1/2" material, where PETClips cannot be used. While an adhesive-only method can often be successful, PolySorb strongly recommends using PETClips for all materials thicker than 1/2". Especially for ceiling applications. In all cases you may also find using a micro pin nailer useful (23 gauge) to hold the material securely in place .